


INSTRUMENT APPROACH CHART - ICAO


WICK

Direct arrivals
to VOR/DME
RWY 31
(ACFT CAT A,B,C,D)

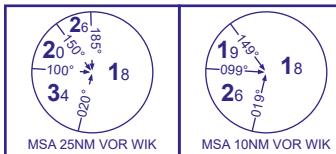

APP	119.705	WICK APPROACH	AD ELEVATION	126
TWR	119.705	WICK TOWER	THR ELEVATION	114
ATIS	113.600	WICK INFORMATION	OBSTACLE ELEVATION	1508 AMSL (1394) (ABOVE THR)
			BEARINGS ARE MAGNETIC	

TRANSITION ALTITUDE
3000

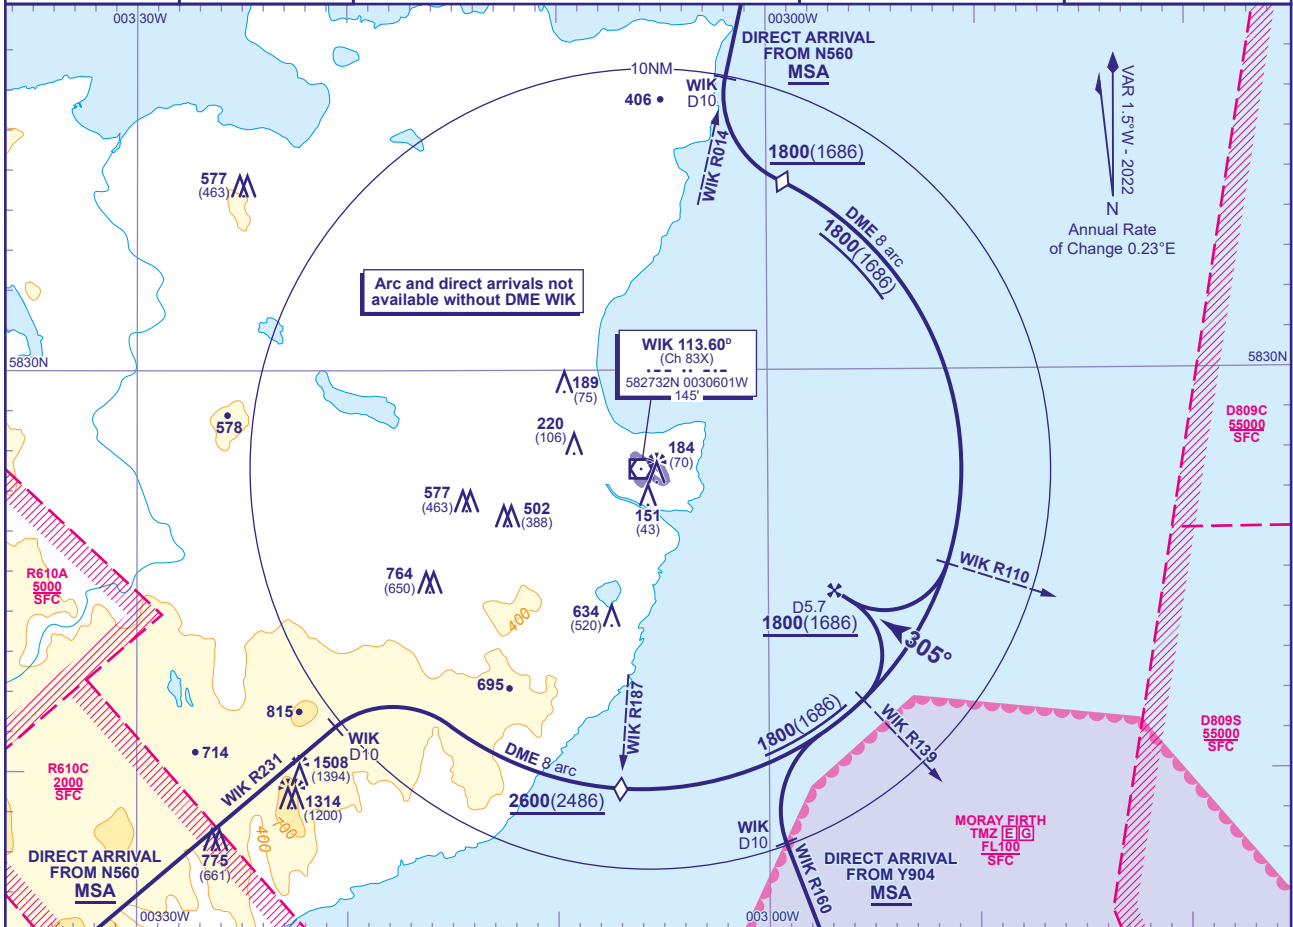

DIRECT ARRIVAL FROM NORTH VIA N560
At MSA or above, at WIK DME 10 turn left to intercept the 8 DME arc WIK clockwise. Once established on the 8 DME arc descend to **not below 1800(1686)**. At lead R110 turn right to intercept R125 WIK VOR inbound and continue as for Basic Procedure.

DIRECT ARRIVAL FROM SOUTH VIA N560 or Y904
At MSA or above, at 10 DME WIK turn right to intercept the 8 DME arc WIK. Once established on the 8 DME arc :
From N560 : Descend **not below 2600(2486)**, when crossing R187 WIK descend **not below 1800(1686)**.
From Y904 : Descend **not below 1800(1686)**. At lead R139 WIK turn left to intercept R125 WIK VOR inbound and continue as for Basic Procedure.

CHANGE (14/20): MAG VAR. N560/Y904 RADIALS. MORAY FIRTH TMZ EXPANDED.